


CLV-213 QUICK REFERENCE GUIDE - Assembly Instructions


START

Step 1: Connect to Percussionaire VDR-4

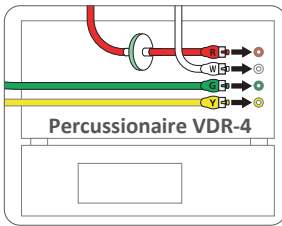


Connect the Ventilator End of the Harness Assembly (with filter) to the matching color coded service sockets of the Percussionaire's VDR-4 ventilator.

Step 2: Connect to Moisturizer Bowl Assembly

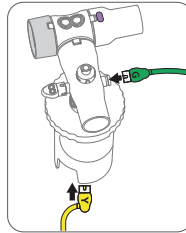


Connect the **YELLOW** AND **GREEN** ends of the Harness Assembly to the matching color coded service sockets of the CLV-213 Moisturizer Housing.

Step 3: Place Moisturizer Bowl Assembly into Bowl Holder

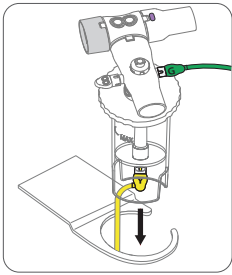




Place the Moisturizer Bowl Assembly into a secure bowl holder.

Step 4: Connect to Shuttle Chamber Assembly

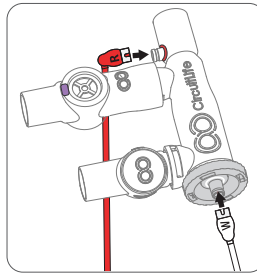


Connect the **RED** and **WHITE** ends of the Harness Assembly to the matching color coded service sockets of the CLV-213 Shuttle Chamber Assembly.

Step 5: Connect Corrugated Respiratory Tubing

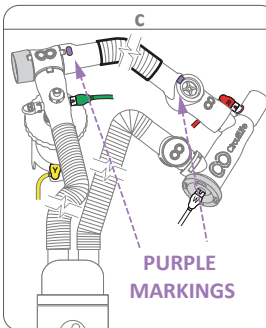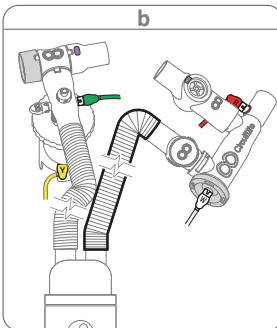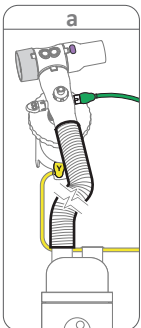

- Outlet of Moisturizer Bowl Assembly ⇌ Inlet of external heater/humidifier chamber
- Outlet of external heater/humidifier chamber ⇌ Exhalation Safety Valve
- Inhalation Safety Valve ⇌ Volume Regulator (between the **PURPLE** markings)

Step 6: Connect Sterile Water to Moisturizer Bowl Assembly

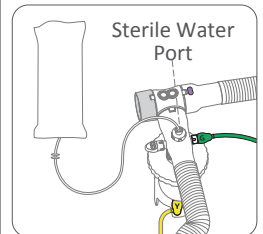


Connect Sterile Water to the Sterile Water Port on the Moisturizer Housing.

TURN OVER TO FINISH ➔

CLV-213 QUICK REFERENCE GUIDE - Final Assembly

Step 7: Check for accuracy

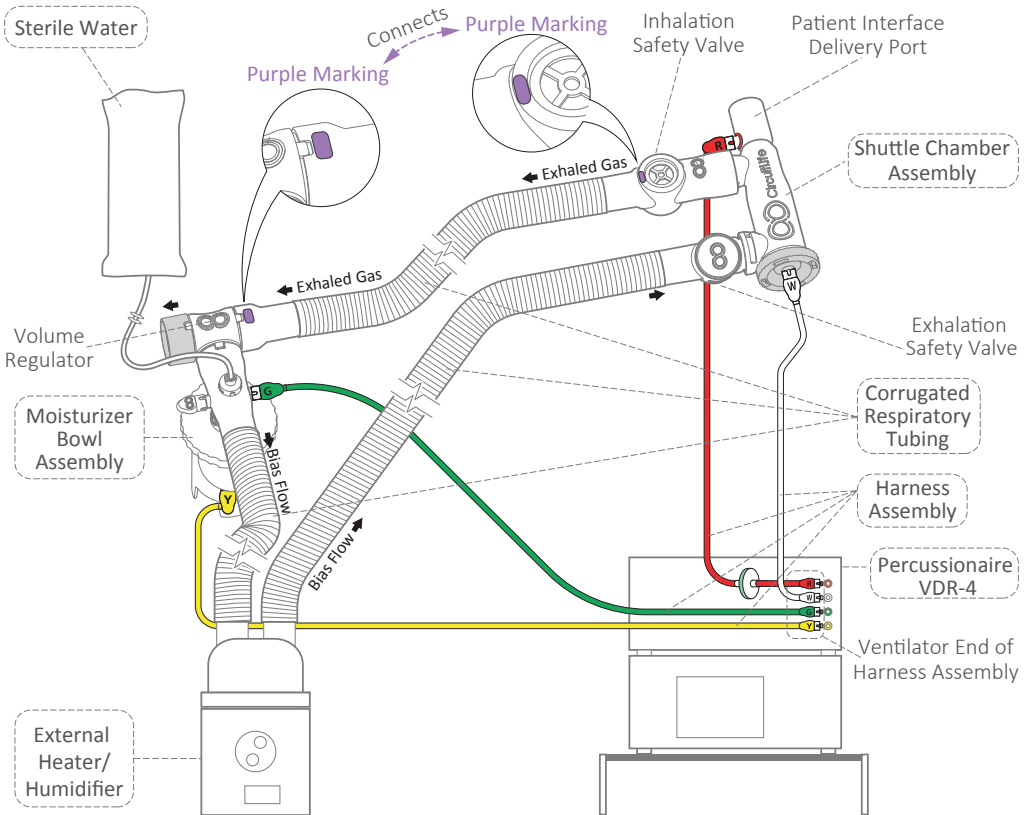

WARNINGS

1. Read the **Instructions for Use in full** before assembling and using the circuit.
2. Check all connections for secure fit prior to use.
3. Device to be used with sterile water only.
4. To be used on a single patient only.
5. To be used only by Clinicians who have been trained on the use and application of the VDR-4 ventilator.
6. Prescription use only. Use only as directed by a physician.
7. The design of the Volume Regulator does not require a balloon.